


**RB20**




 

**ROCWARE®**

## 4K Dual-lens PTZ VideoBar

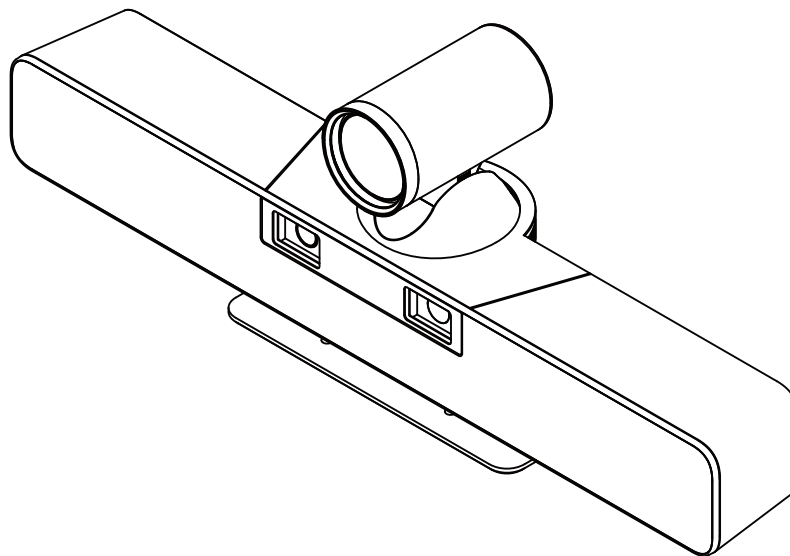


**Quick Start Guide**

# Pack List

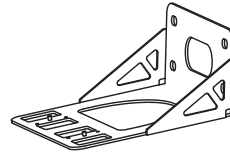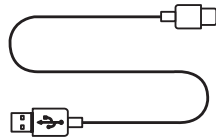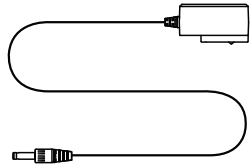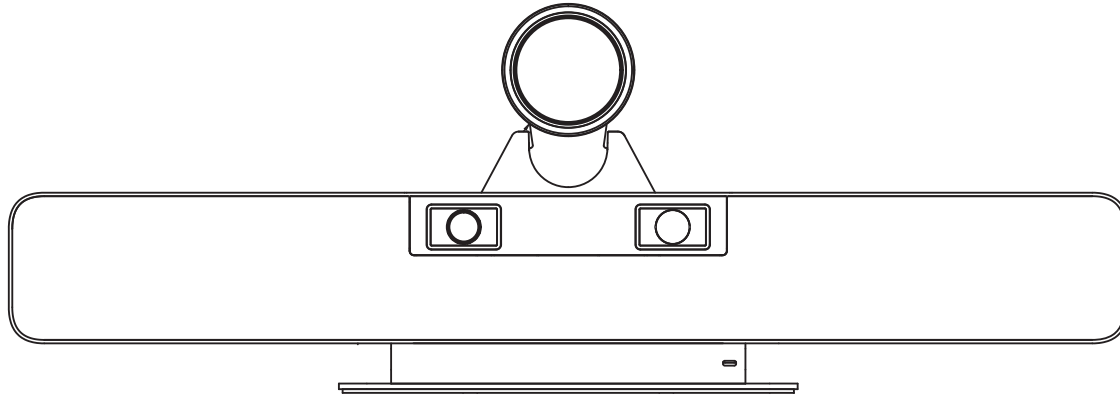


# Front View


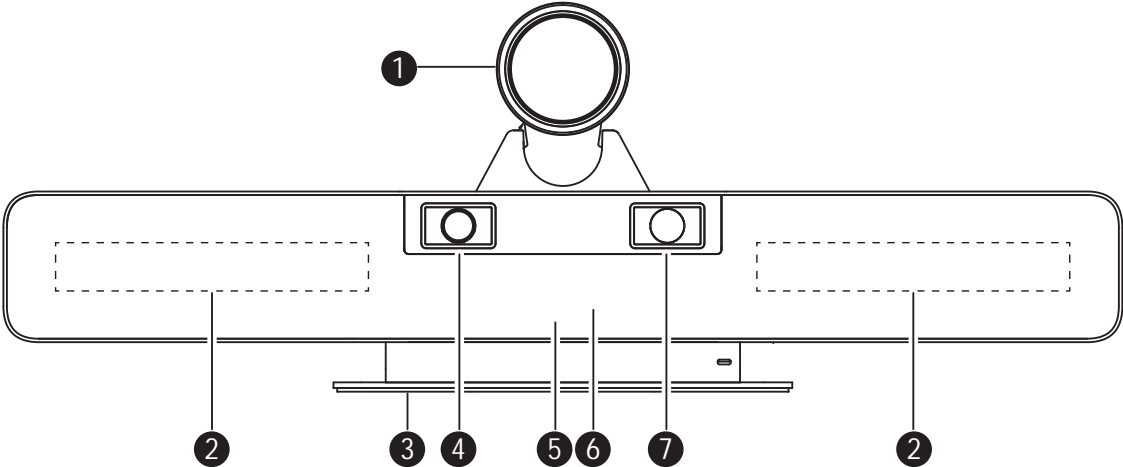


- 1. Features Lens
- 2. Loudspeaker
- 3. Base
- 4. Panorama Lens
- 5. Microphone
- 6. Status Indicator
- 7. IR Window







# Back View

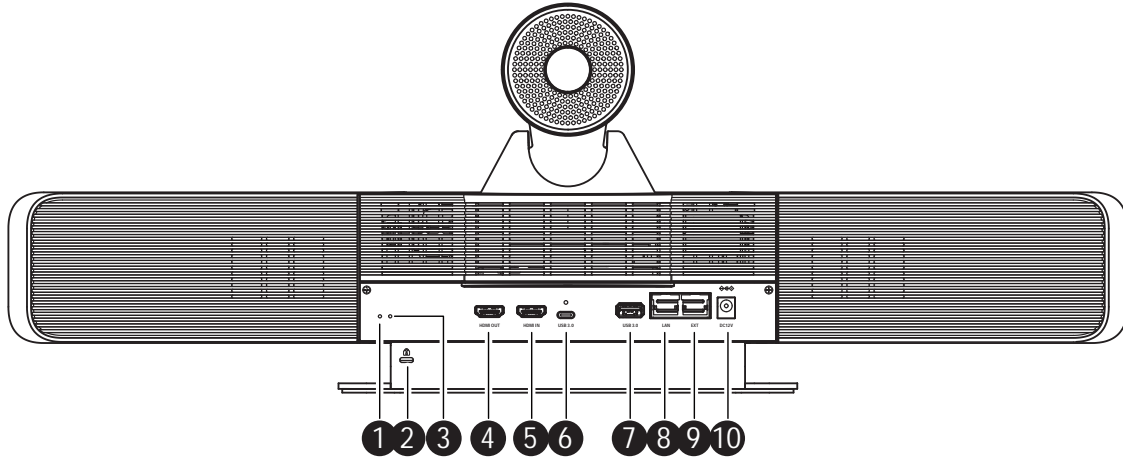






- |                             |                             |                  |                       |                      |
|-----------------------------|-----------------------------|------------------|-----------------------|----------------------|
| 1. Reset Port               | 2. Security Lock            | 3. Burning Port  | 4. HDMI OUT Interface | 5. HDMI IN Interface |
| 6. USB 3.0 Type-C Interface | 7. USB 3.0 Type-A Interface | 8. LAN Interface | 9. EXT Interface      | 10. DC 12V Interface |

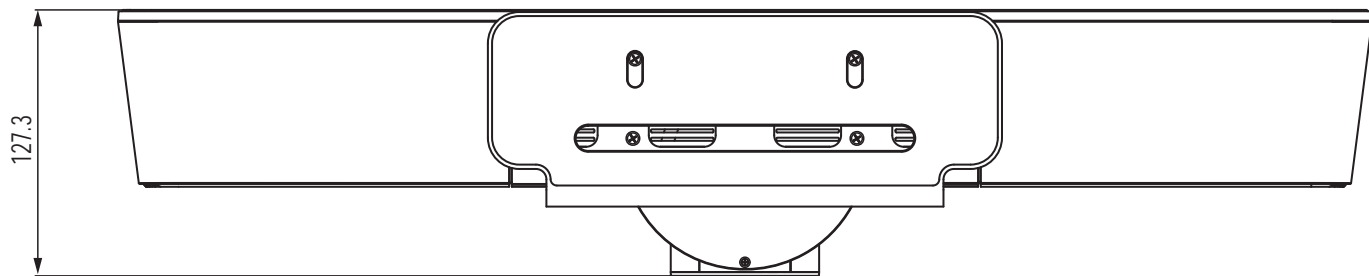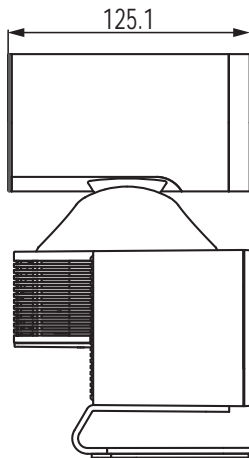


# Wall Mounting

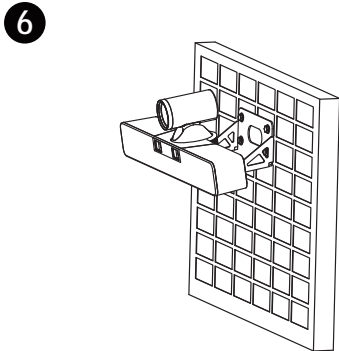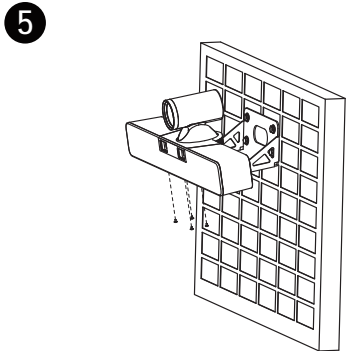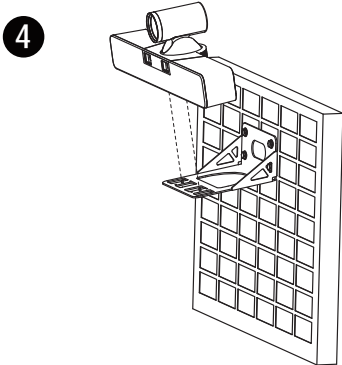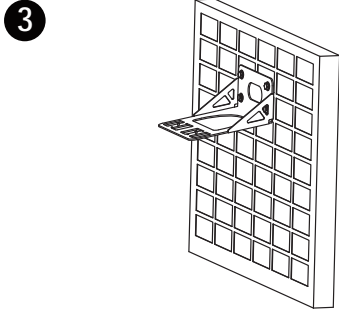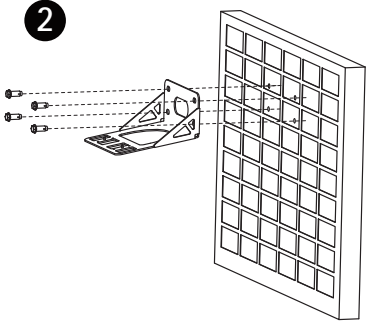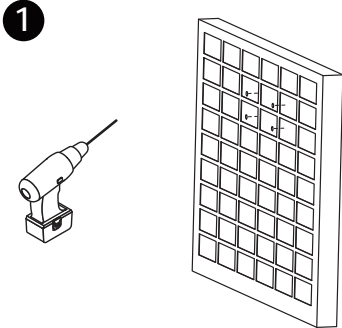

# TV Mounting

 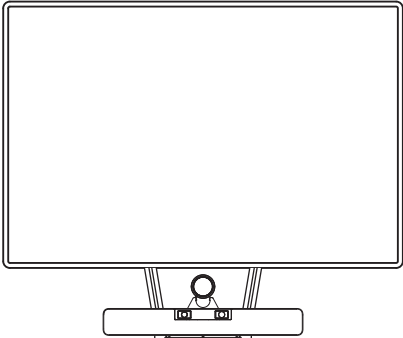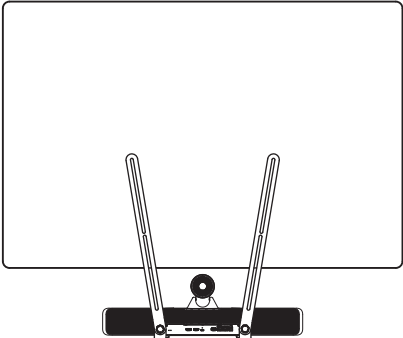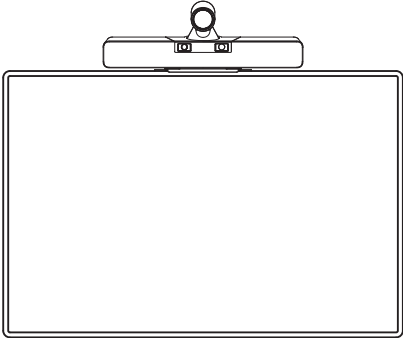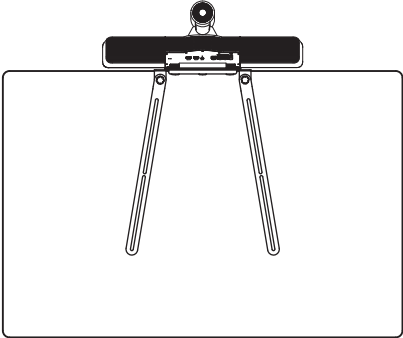

# Connection

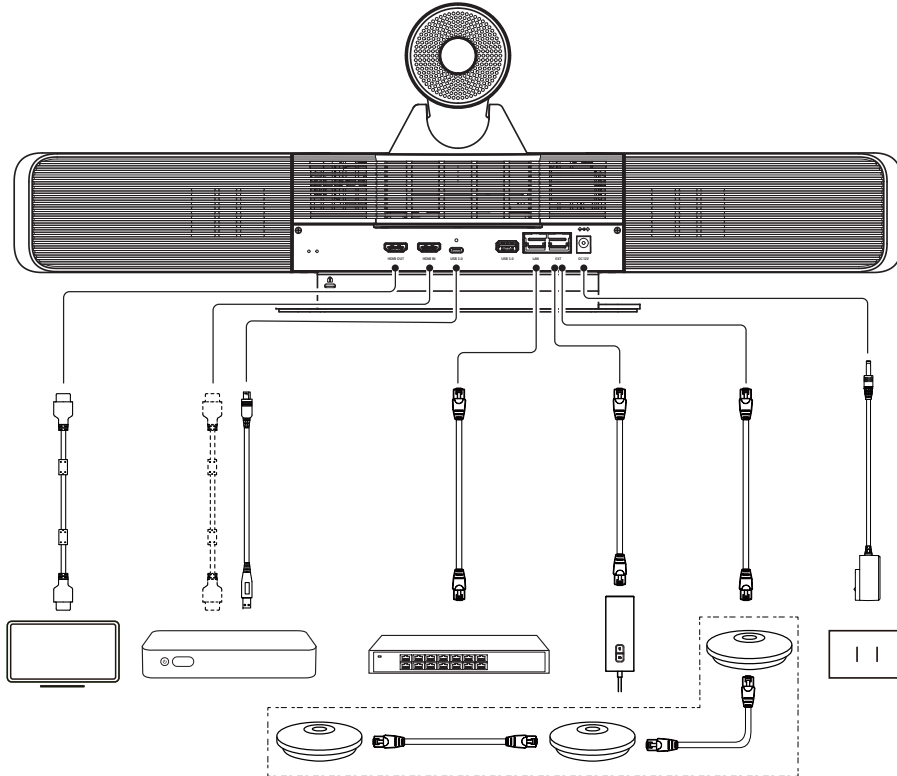


(The recommended horizontal cascade distance is 3 meters, and the maximum number of cascades is 3.)



Note

When the device needs to switch between peripheral mode and BYOM mode, connect the HDMI OUT of the conference PC to the HDMI IN port of the camera. If only using peripheral mode, please ignore this connection.

# Remote Control

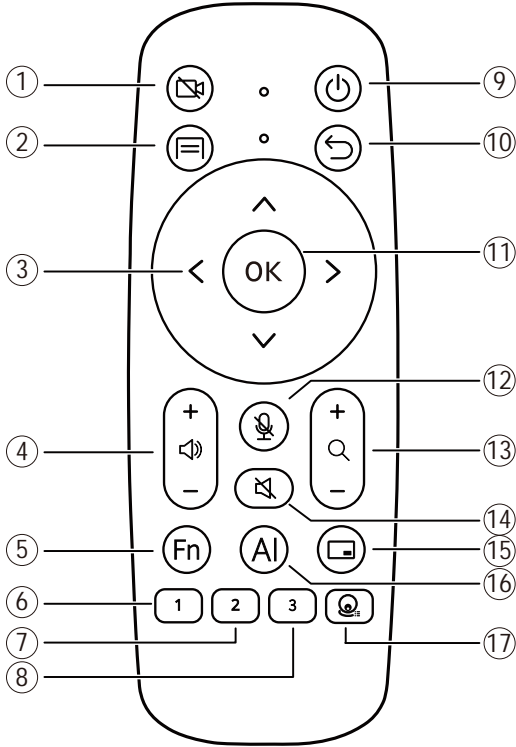

No.	Name (EN)	Nome (IT)	Nombre (ES)	Nom (FR)	الاسم (AR)
1	Privacy Cover Switch	Interruttore copertura della privacy	Interruptor de cubierta de privacidad	Interrupteur de couverture de confidentialité	مفتاح غطاء الخصوصية
2	Menu	Menu	Menú	Menu	القائمة
3	Directions	Direzioni	Direcciones	Directions	الاتجاهات
4	Volume +/-	Volume +/-	Volumen +/-	Volume +/-	+/- الصوت
5	Reserve	Riserva	Reserva	Réserver	احتياطي
6	Preset 1	Preimpostazione 1	Preajuste 1	Préréglage 1	الإعداد المسبق 1
7	Preset 2	Preimpostazione 2	Preajuste 2	Préréglage 2	الإعداد المسبق 2
8	Preset 3	Preimpostazione 3	Preajuste 3	Préréglage 3	الإعداد المسبق 3
9	Standby	Standby	Espera	Veille	وضع الاستعداد
10	Return	Ritorno	Regresar	Retour	عودة
11	OK	OK	OK	OK	موافق
12	Microphone Mute	Disattivazione del microfono	Silenciar micrófono	Mise en sourdine du microphone	كتم الميكروفون
13	Zoom	Zoom	Zoom	Zoom	زووم
14	Speaker Mute	Disattivazione dell'altoparlante	Silenciar altavoces	Mise en sourdine des haut-parleurs	كتم السماع
15	Layout Switch	Commutazione del layout	Cambio de diseño	Commuter la disposition	تبديل التخطيط
16	AI	AI	AI	AI	الذكاء الاصطناعي
17	Preset	Preimpostazione	Preajuste	Préréglage	الإعداد المسبق

# Warranty & Copyright

EN: If failure caused by non-human causes occurs within three years from the product's purchase date, you may enjoy the warranty service of the product.

Copyright © ROCWARE 2025. All rights reserved.